

VOGUE WALL/CEILING FANS

Installation & Maintenance Instructions

1. Check fan for possibility of transit damage.
2. Ensure that the duct is clear of any debris that could be drawn into the fan impeller.
3. Check the fan is free to rotate.
4. Cut the hole for the fan according to the template provided.
5. Secure Fan using the fittings provided.
6. Fit the front safety grill with the supplied fasteners.
7. Connect as per provided wiring diagram.
8. Connections, cables and cords must be installed in accordance with local regulations.
9. Fans 202 to 356 have automatic thermal cut out switches incorporated in the motor as standard.
10. All fans are provided with sealed-for-life bearings and are virtually free.
11. This appliance is not intended for use by young children or infirm persons without supervision.
12. This product must be installed by a licensed Electrician.
13. The Licensed Electrical installer must ensure that an approved means of disconnection be incorporated into the fixed wiring.
14. After starting check:-
For excessive vibration
Full load Amps and ensure they do not exceed the nameplate Amps.

15. For duct or partition mount, precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other open-fire appliances. (As per installation example below).

16. Warranty:-

Fantech Pty Ltd warrants products of its manufacture when not misused or neglected to be free of defects in workmanship and/or materials. Our obligation under this warranty is limited to repairing or exchanging F.O.B. factory, any part, assembly or portion found to be defective within one year from the date of commissioning but not to exceed eighteen (18) months from date of shipment from our factory.



The Company assumes no responsibility for labour costs involved in the removal of defective parts, installation of new parts or related service charges.

The Company shall have the option of requiring the return of the defective part (transportation prepaid by the Buyer) to establish the claim.

Warranty will be void if installation is not carried out by qualified personnel in accordance with these instructions and good trade practice.


Fully detailed warranty conditions are contained in Fantech's Standard Conditions of Trading.

17. Do not operate if the supply cord or plug has been damaged. Please return to manufacturer or service agent for repair.

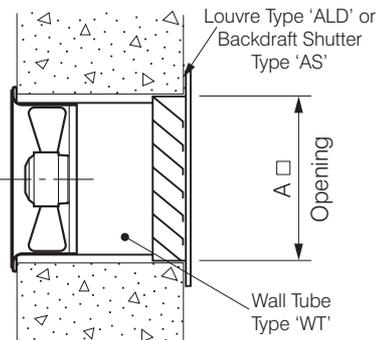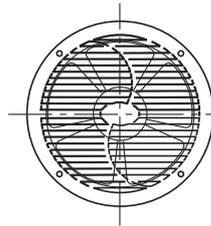


Fan Model	A□
VRP202/4	214
VRP252/4	264
VRP302/4/6	325
VRP354/6	375


VRP202 - 356 WIRING DIAGRAM

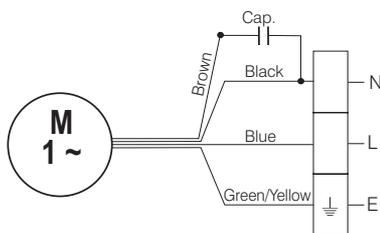

VA2.0 - VARIABLE SPEED

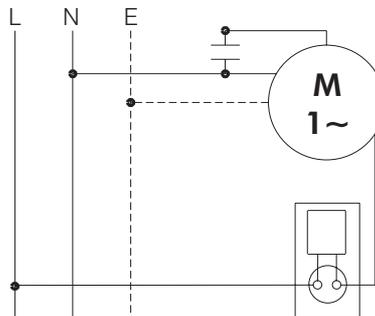

SSC - 2 SPEED SWITCH

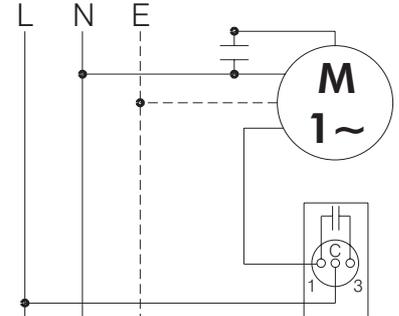

Head Office:

Melbourne
A.B.N. 11005434024
Ph: (03) 8545 2345
Fax: (03) 8545 2399

Interstate Offices:

Sydney:
Ph: (02) 8811 0400
Adelaide:
Ph: (08) 8377 0502

Interstate Distributors:

Perth:
Ph: (08) 9344 6777
Brisbane:
Ph: (07) 3805 5944

Canberra:

Ph: (02) 6280 5511
Townsville:
Ph: (07) 4775 5222
Launceston:
Ph: (03) 6344 6888

Newcastle:

Ph: (02) 4961 6088
Woolongong:
Ph: (02) 4226 5133

Darwin:

Ph: (08) 8947 2010

International Distributors:

Auckland:
Ph: (09) 444 6266

Christchurch:

Ph: (03) 379 8622
Wellington:
Ph: (04) 528 0532
Hong Kong:
Ph: (852) 2598 4228
Jakarta:
Ph: (6221) 566 8453
Kuala Lumpur:
Ph: (603) 747 3500
Taipei:
Ph: (8862) 236 88936
Bangkok:
Ph: (662) 379 4333



Fantech®

Part No. : INST - VOGUE 01/02